



gpstracker.net.in

Freedom is lost now...!

PREMIUM SERVER:

Thanks for purchase of model no: pp2 and we allotted you an account in premium server.

Step:1 gprs sim activation

Take gprs activated sim with balance of rs 20 inr atleast(to know gprs activated or not install the sim in mobile and open www.google.com if google site is loaded then gprs is active if site does not load contact gprs service provider. Tracker uses only 30mb/month

Recommended gprs service - airtel gprs 99 /month
-aircel gprs-24/month

Step: 2- Switching on pp2 model.

Insert simcard&battery, and you can see switchon button on right side of watch,
Then call the phone number of sim,you should hear 4 rings and auto disconnected or you will hear noise

Step3:quick setup

From your mobile please send sms.

1.Time zone

lang,0,zone,+5.80#

you will get reply as ok

2. centre number

pw,123456,center,9700025002#

9700025002= enter your phone number where you want to receive sms from tracker.

3.For apn settings for example with airtel sim card

apn,,,aircelgprs#

You get reply as config OK

4.for admin ip settings

ip,37.59.232.31,port,11701#

you will get reply as config ok

5. time interval setup

upload,20#

STEP-4: for live tracking

Place the device in open sky.

Then open <http://gpstracker.net.in/gs>

User name: your email id

Password: 123456

then you can able to see your device live and track them now.



gpstracker.net.in

Freedom is lost now...!

Note: to get gps position by sms
url#

Pp-2 display information	
Picture	
	Indicates that the GPS module is turned on, but not location. (If the position without any display indicates the GPS module is not open)
	Indicates that the GPS module is turned on, and has been positioned. (If the position without any display indicates the GPS module is not open)
	Represents GSM signal strength, into 1,2,3,4 level.
	Indicates that no card.
	Indicates that the battery is divided into 1,2,3 level
	Indicates start charging state.
	Indicates the charge off state.
	Off indicates fully charged state.
	Indicates sos dialing state.

Note:

1. to know **additional features of server** plz click on this link. <http://www.gpstracker.net.in/premiumserversupport.html>
2. for full complete **instruction manual download** from below link
http://www.gpstracker.net.in/QuickSetup_Downloads/pp2manual.pdf
3. download **android gps settings** application : <http://gpstracker.net.in/download/Gps%20Settings.apk>
4. Download **desktop application** from <http://www.gpstracker.net.in/download/pwebtrack.rar>
5. Download android monitor application from http://gpstracker.net.in/download/Gps%20Live%20Track_3.0.apk
6. for other network sim card apn names: <http://www.gpstracker.net.in/download/apnnames.pdf>

If you have any more queries regarding installation please can call us on **09700025002** or **040 64559002** or mail us at contactus@gpstracker.net.in website: www.gpstracker.net.in 13-100 meerpet, Hyderabad 97