



Gpstracker.net.in

Freedom is lost now...!

PREMIUM-Mv2

Thanks for purchasing of mp1 and we allotted an account in premium server with 100 sms credits
Please follow the procedure in step wise manner.

Step:1 gprs sim activation

Take gprs activated sim with balance of rs 20 inr atleast(to know gprs activated or not install the sim in mobile and open www.google.com if google site is loaded then gprs is active if site does not load contact gprs service provider. Tracker uses only 30mb/month

Recommended gprs service - airtel gprs -28/month(online recharge offer)
-aircel gprs-47/month

Step: 2- Switching on mv2 model.

Insert simcard and connect the mv2 model to battery wire and yellow fuelcut off wire as per wiring diagram (back of the page)then u can see the 3 leds blinking on device

Then call the phone number of sim, you should hear 4 rings and auto disconnected indicates device is on when you are unable to get ring indicates device off /wrongly placed sim in the sim slot

Step3:quick setup

From your mobile please send sms.

a.SMS NUMBER SETUP

CENTER,A,9700025002#

9700025002= your mobile number

b.For apn

apn,aircelgprs#

c.for admin ip settings

SERVER,0,37.59.232.31,10202#

you will get reply as server ok

d.for gprs time interval upload

TIMER,10#

You will get reply as tn ok

e. Fuel cutoff

1.fuel cut off

RELAY,1#

you will get reply as fuel cut off

2.. fuel cut off restore

RELAY,0#

you will get reply as fuel cut off restored



Gpstracker.net.in

Freedom is lost now...!

f: VIBRATION ALARAM

VIBRATION,2,3#

2=0TO 5 from lower to higher number sensitivity of the alaram

3= to 1 to 3 range where 1= call 2= sms 3= call and sms you receive

g: to get position by sms

Just call the mobile number of the tracker and you get sms position

STEP-4: for live tracking

Place the device in open sky.


Then open <http://www.gpstracker.net.in/gs>

User name:

Password:

then you can able to see your device live and track them now.

wiring diagram mv2 model

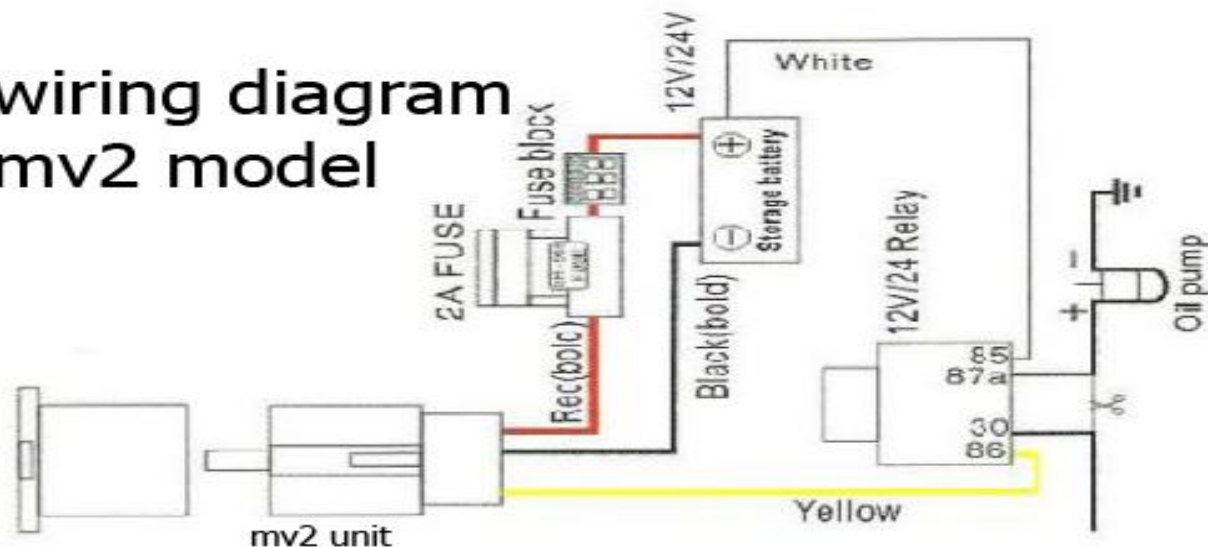

Note:1. to know **additional features** of server plz click on this link.

<http://www.gpstracker.net.in/premiumserversupport.html>

2.for full complete **instruction manual** download from below link <http://gpstracker.net.in/download/mv2.pdf>

3.Download **desktop application** from <http://www.gpstracker.net.in/download/pwebtrack.rar>

If you have any more queries regarding installation please can call us on 09700025002 or 040 64559002 or mail us at contactus@gpstracker.net.in website: www.gpstracker.net.in